




These steps shows how to modify the front cowling on Audi A3 S3 8V 2012-2016.

Modifications on Audi A3 S3 8V Facelift 2017-2019 are similar but it will be slightly different.

Additional modifications may be required other than those displayed in this instruction.


Cut the upper right AC condenser bracket as marked on the photo.

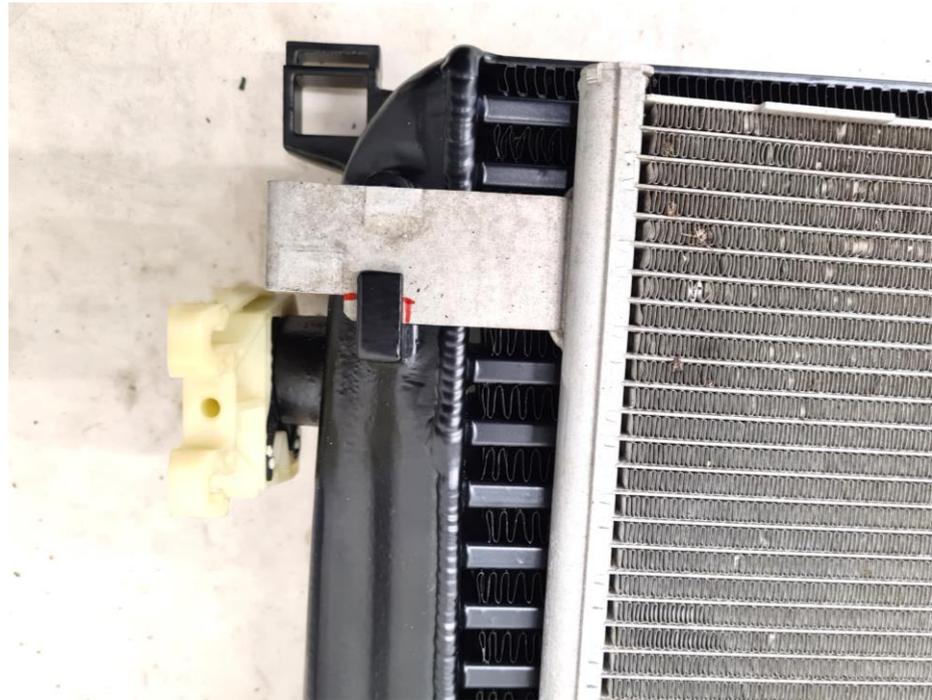

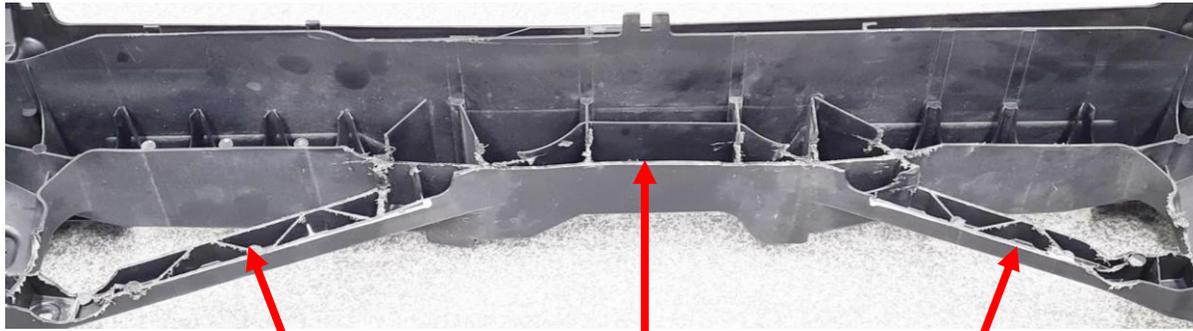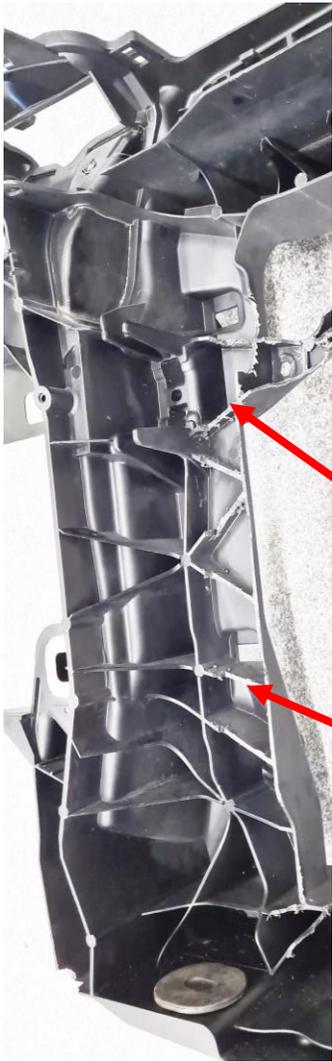

Remove red areas.

Extra photos:

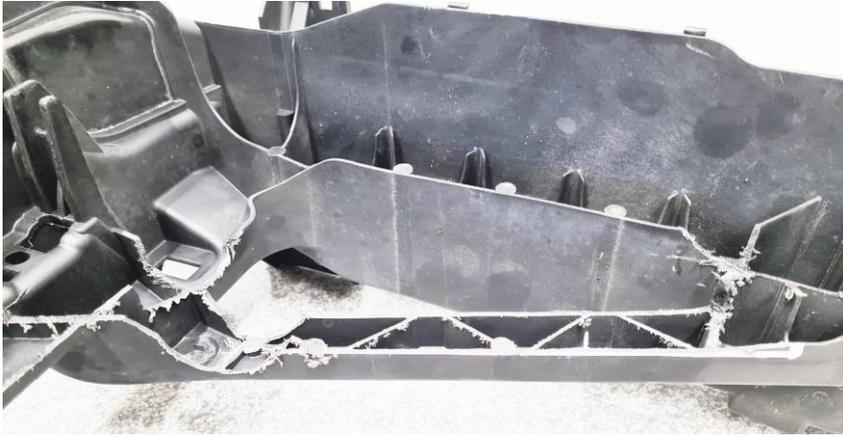

Extra photos:

